


SHIELD LIFT ASSIST CLAMP (S.L.A.C.)

INSTALLATION AND USE:

1. INSERT INCLUDED SQUARE STEEL PLATE BETWEEN ARMOR AND SOCKET BOLTS TO PREVENT SURFACE MARING ON ARMORED SHIELD.
2. PLACE SLAC ONTO THE BOTTOM EDGE OF THE SHIELD, BOLT HEADS FACING THREAT.
3. THE EYE BOLT SHOULD BE FACING THE USER ON THE BACK OF THE SHIELD.
4. TIGHTEN HEX BOLTS WITH INCLUDED 3/16 ALLEN WRENCH UNTIL SNUG.
5. ATTACH AN AJUSTABLE SINGLE POINT SLING (NOT INCLUDED) TO THE EYE BOLT.

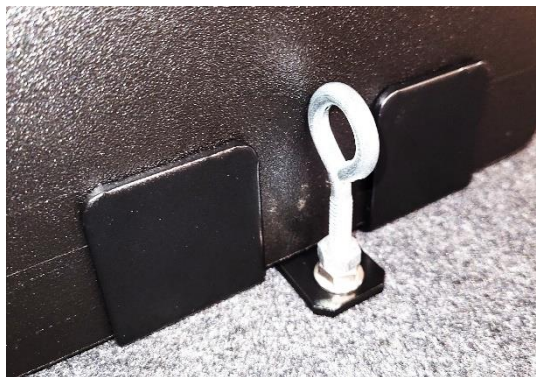

MADE IN THE USA

DELIA TACTICAL INTERNATIONAL L.L.C

ALL RIGHTS RESERVED 2023